



Fast Track Troubleshooting

Model: WF306BHW/XAA
WF306BAW/XAA
WF306LAW/XAA

IMPORTANT SAFETY NOTICE – “For Technicians Only” This service data sheet is intended for use by persons having electrical, electronic, and mechanical experience and knowledge at a level generally considered acceptable in the appliance repair trade. Any attempt to repair a major appliance may result in personal injury and property damage. The manufacturer or seller cannot be responsible, nor assume any liability for injury or damage of any kind arising from the use of this data sheet.

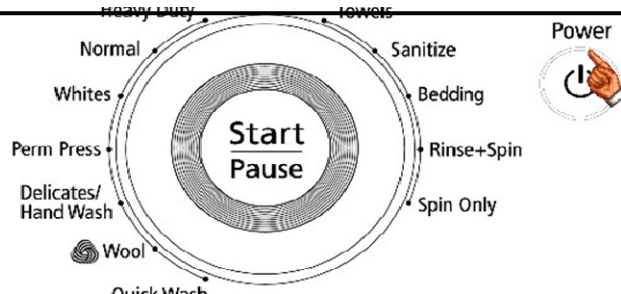
SUPPORT INFORMATION

Training — Plus One <http://my.plus1solutions.net/clientPortals/samsung>
 Help — GSPN <http://service.samsungportal.com/>
 Samsung Product Support TV <http://support-us.samsung.com/spstv/howto.jsp>
 Customer information videos and chat programs. Programs for Fridges, Laundry, Ranges & D/W

Publication # nwwf306 Revision Date

07/30/2011

Please Note: Bulletin on Water Leak issue



Service Mode Power on state Press extra Rinse & Signal

Cycle Count = Press the **Signal** button to see how many times the unit was used

Soft Ware # = Press **Soil** button shows software version

Fast Time Down = Press **Temp** button to advance to next cycle

Fault Code Test = Press the **Silver Care** button to view the stored fault codes – then turn Dial to view error codes (Push Start/Pause while the code is displayed to view the number of cycles since the error occurred)

Peripheral (Main PCB) input Tests

1. **Extra Wash**. Then turn the Dial so that the **Normal** is turned on. Next, press the Start/Pause Key. The Water Temperature will be displayed in Fahrenheit.
2. **Extra Wash**. Then turn the Dial so that the **Whites** is turned on. Next, press the Start/Pause Key. The door status will be displayed (OP if open, CL if closed).
3. **Extra Wash**. Then turn the Dial so that the **Perm Press** is turned on. Next, press the Start/Pause Key. The door lock Switch status will be displayed (UL if unlocked, Lo if locked).
4. **Extra Wash**. Then turn the Dial so that the **Delicate/Hand Wash** is turned on. Next, press the Start/Pause Key. “0” will illuminate if below level, “1” if above level (Overflow).
5. **Extra Wash**. Then turn the Dial so that the **Wool** is turned on. Next, press the Start/Pause Key. “-0” will illuminate if below level, “-1” if above level (Heater-On).
6. **Extra Wash**. Then turn the Dial so that the **Quick Wash** is turned on. Next, press the Start/Pause Key. “0” will illuminate if below level (Reset), “1” if above level.
7. **Extra Wash**. Then turn the Dial so that the **Towels** is turned on. Next, press the Start/Pause Key. The Water Frequency will be displayed.
8. **Extra Wash**. Then turn the Dial so that the **Rinse+Spin** is Turned on. Next, press the Start/Pause Key. Then, it will display the Ag Kit Status in 3 seconds: “-” if AG kit is operated properly. “7E” if AG kit is out of order (check wire harness & PCB)
9. **Extra Wash**. Then turn the Dial so that the **Spin Only** is turned on. Next, press the Start/Pause Key. Then, it will display the MEMS Sensor Kit status after displaying “00” for 3 seconds: “-” if MEMS Sensor kit is operated properly. “8E” if MEMS Sensor kit is out of order (check wire harness & PCB)

Quick Test Mode

Note: This test erases all faults and memory:

To enter press Spin, Soil, & Power
simultaneously with the power off.

simul-

1. All LED's light up and the washer beeps as it enters the Quick Test Mode.
2. The unit displays the software version for a second then clears the EEPROM.
3. After the displaying the software version, LCD will display Model information. If EEEE is displayed the PCB ass'y is defective.
4. When the version is displayed. Press the following keys to test the various components

Press **Temp Key** to cycle through the Water Valves in this order: Pre Cold, Cold Main, Bleach, Cold Main & Bleach for Fabric Softener, Hot, then off.

Press **Spin Key** to test Motor circuit.

Press **Signal Key** to test Drain Pump

Press **Soil** to test door lock - unlock circuit

Service Mode:

This mode allows more detailed operation tests and troubleshooting, to enter press Signal & Extra Rinse simultaneously with the power on.

While in Service Mode the following tests can be performed:

Quick Spin Test = Delay Start & Silver Care:

This accelerates the drum motor from 0 to maximum RPM over a few minutes. **Note: Stay with the washer during this test, out of balance detection may be bypassed.** Press the Start/Pause button during the test to hold its spinning speed for 10 minutes before going back to Quick Spin Test Mode.

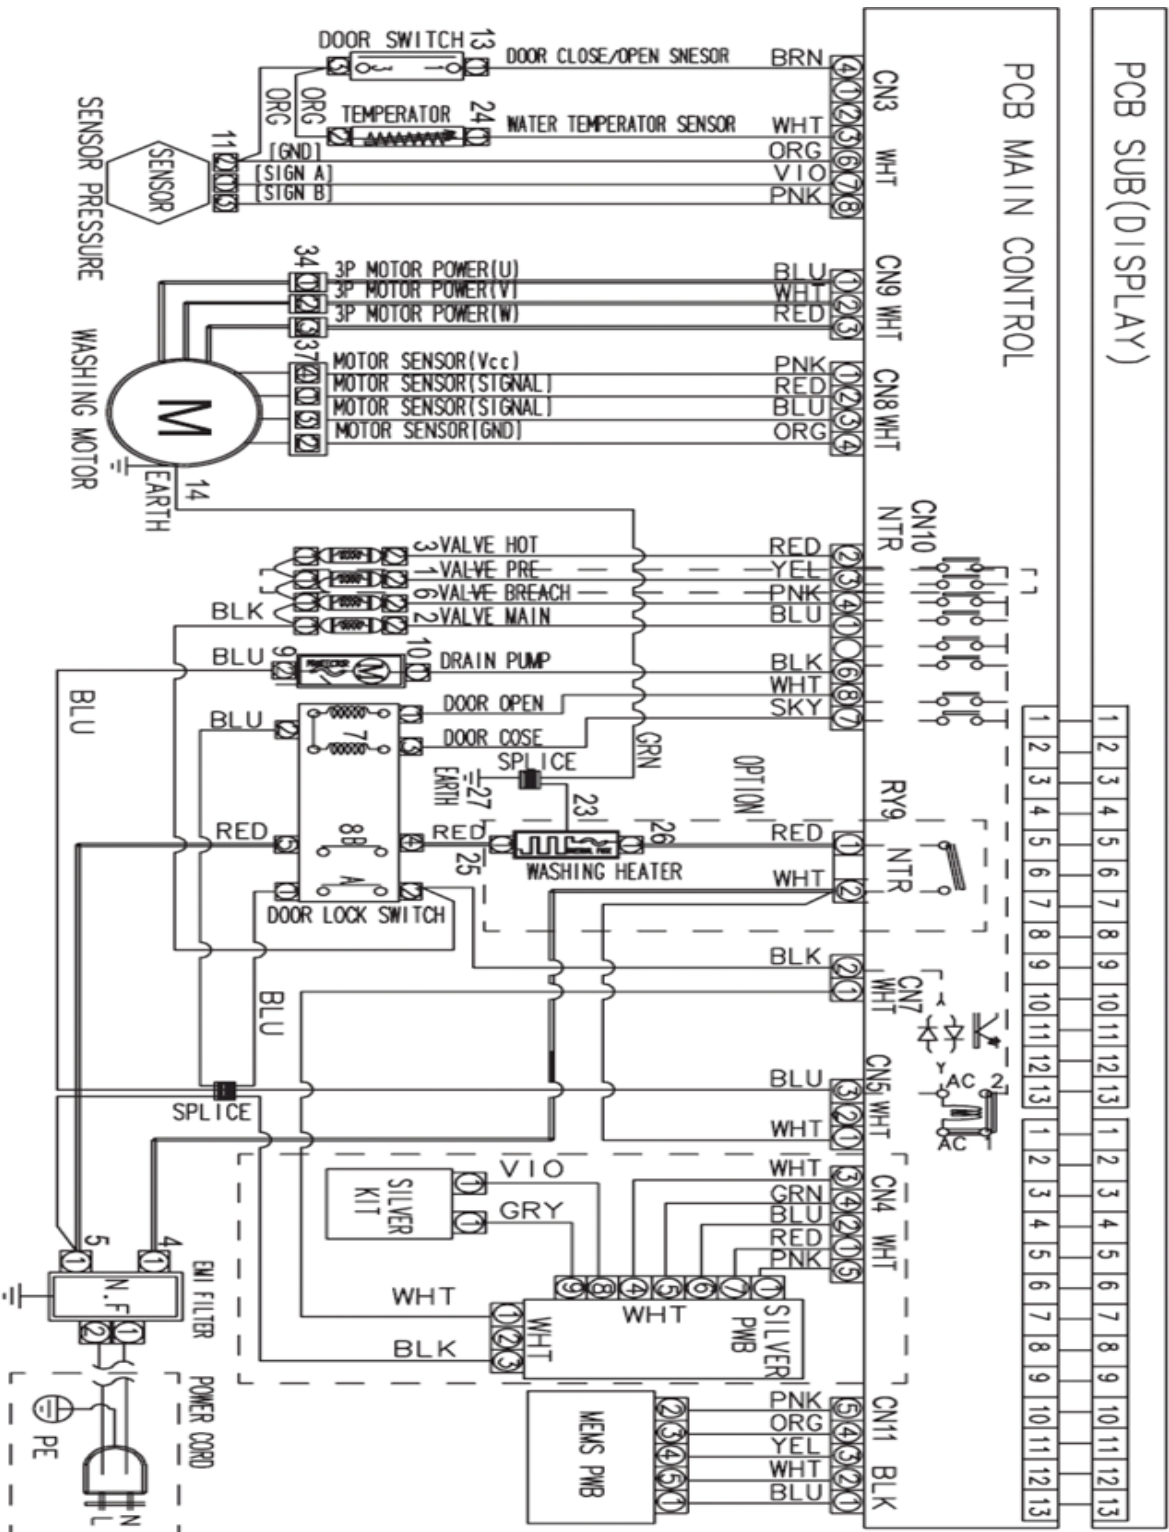
Non Steam Models

SCHEMATIC DIAGRAM

Model NOTE

Special Models

VALVE PRE, HEATER : DELETE->WF306LAW
 VALVE PRE : DELETE->WF30684M
 VALVE PRE, HEATER, SILVER KIT/PMB, GUIDE WATER: DELETE->WF206LAW/ANW

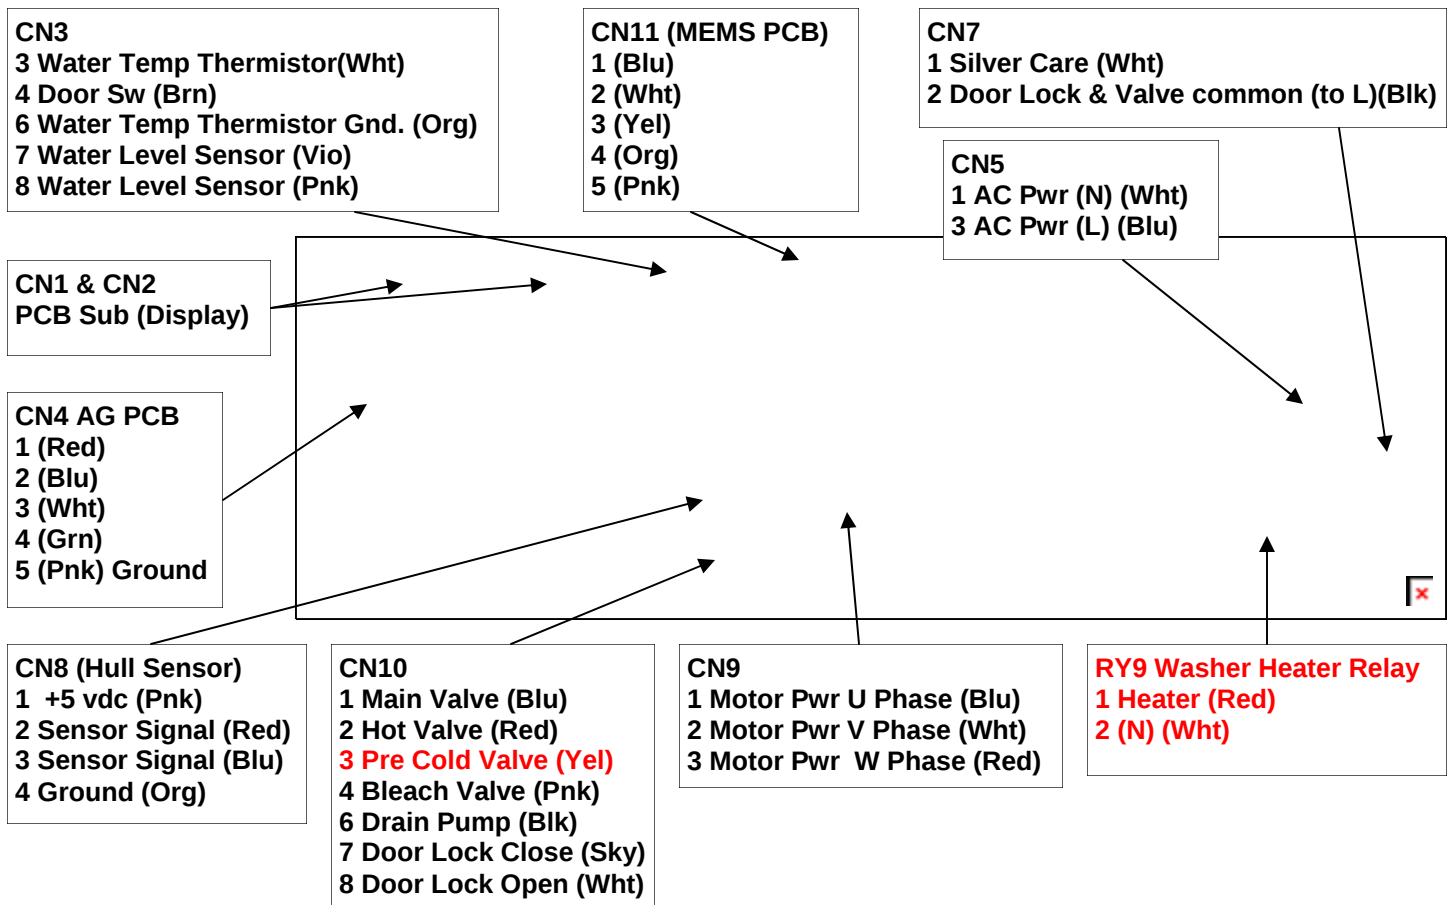


EEPROM Clear Check

Power off, Press Delay Start, Signal and Power Key at the same time. Good = Good Fail = FAIL

 
 
All memory will be cleared, including Fault Codes

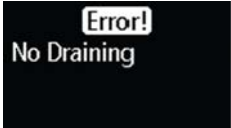
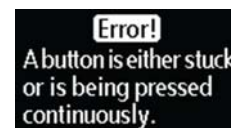
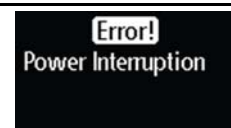
 
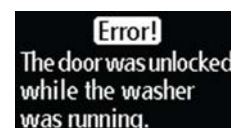
 
 
This should be done when a new Main PCB is installed

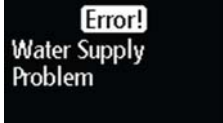


Water Temperature Thermistor Check	Test 1	Test 2
Connector CN 3 Pin 3 (White) and CN3 Pin 6 (Orange)	Operating voltage at Room temperature -	Operating Resistance at Room Temperature (Power off) disconnect CN3
	2.5VDC (5VDC May indicate a connector issue)	12kΩ-14kΩ
Door Switch Check	Test 1	Test 2
Connector CN3 pins #6(Org) & # 4(Brn)	5VDC Door Open, 0VDC Door Closed	Operating Resistance with power off
		open with door open, short with door closed.
Water Level Sensor Check	Test 1	Test 2
Voltage: Connector CN 3 pins #6(Org) & # 7(Vio) And Connector CN 3 Pins #6(Org) & #8(Pnk) Resistance: Connector CN 3 Pin 8 (Pink) and CN7 Pin 7 (Violet)	Operating voltage at no water in the drum-	Operating Resistance (Power off)
	2.5VDC	CN3 Pin 8 (Pink) and Pin 7 (Violet) 22- 24Ω
Hall Sensor Check	Test 1	Test 2
Connector CN8 pins #4(Org) & # 2(Red) additionally 4(Org) & # 3(Blu)	Manually spin the drum to see the voltage change, Power On	N/A
	0Vdc or 3.75Vdc	
Motor Check	Test 1	Test 2
Connector CN9 Pin 1 (Blue), Pin 2 (White) and Pin 3 (Red)	Power Off 11.5Ω across Pins 1-2, Pins 1 -3, & Pins 2-3	N/A
A/C Power Check	Test 1	Test 2
Connector CN 5 Pins 1 (White) and 3 (Blue)	Power On 120VAC	N/A

Door Lock Check	Test 1	Test 2
Connector CN10 Pin 7 (Sky Blue) and CN5 Pin 3 (Blue)	When Door is Locked or Unlocked there is a pulse of 120VAC for a few milliseconds.	With Power Off, the resistance between these pins will be between 56 - 62Ω
Door Unlock Check	Test 1	Test 2
Connector CN10 Pin 8 (White) and CN5 Pin 3 (Blue)	When Door is Locked or Unlocked there is a pulse of 120VAC for a few milliseconds.	With Power Off, the resistance between these pins will be between 56 - 62Ω
Drain Motor Check	Test 1	Test 2
Connector CN10 Pin 6 (Black) and CN5 Pin 3 (Blue)	120VAC with the pump On and 0VAC with the pump off	Power Off, the resistance should be 13.9Ω
Water Valve Check	Test 1	Test 2
Connector CN5 Pin 3 (Blue) to CN10 Pin 4 (Pink), Pin 3 (Yellow), Pin 2 (Red) , Pin 1 (Blue)	120VAC with the Valve On and 0VAC with the Valve off	Power Off, resistance at valve is from 1202Ω - 1245Ω
Heater Relay Check Varies by Model	Test 1	Test 2
Connector CN5 Pin 3 (Blue) and RY9 (heater relay) Pin 1 (Red)	120VAC with the Heater On and 0VAC with the Heater off	Power Off, heater resistance is 16.6 Ω

Error Type	Error Mode		Details
	LED	LCD	
Water Level Sensor	LE 8		Check the Hose where the sensor is connected, may be loose, pinched, damaged or clogged. Also check the sensor it may be disconnected or defective. The Main PCB may also be defective
Motor Drive Error or Hall Sensor error	3E		Check the motor drive connector, it may be loose. The hall sensor may be disconnected, loose or damaged . Check for a foreign object inside the motor or motor damage. The stator might be loose or damaged. The drum might be overloaded from too many clothes or the relay or PCB might be defective.
	E3		
	bE		
Water Supply Error	nF 3		Check the water valve wiring harness. Check whether the water supply valve is clogged with foreign material and whether water is supplied properly. Check for reversed fill hoses Check water temperature, if sensed as higher than 50 °C in the Wool or Lingerie cycle it will create error. Check the relays, if they operate correctly replace the Main PCB.
Fill Hoses Reversed	nF1		Correct Hot/Cold hose connections
System Error	SF1 SF2 SF3		Replace PCB

Error Type	Error Mode		Details
	LED	LCD	
Drain Error	nD 1		Check for Foreign material entering the pump or hoses. Check to make sure the wiring harness is connected properly. Check the water pump terminal . Check for freezing
Power Error	2E 91 92		Make sure to check the operating voltage. (An error occurs when under or over voltage is supplied.) Check whether a plug receptacle is used. When the connecting wires are too small (extension cord use), a momentary low voltage may drop up to 10 V Main PBA fault (sometimes)
	PF		Momentary Power Failure
Communication Error	AE		Check the wire connections and terminal contacts between the sub and main PBAs. Check for disconnected wires. Check whether the sub PCB is short circuited because of moisture. If the main PCB's communication circuit is faulty, replace it.
EEPROM Fault.	11		Go to "EEPROM Clear Mode" If display shows "FAiL", Replace Machine Control Board
Switch Error (Main Relay Error)	E2 15		Check whether either the Power switch or a tact switch (any button) is stuck down. Check whether the service PBA holding screws are fastened too tight pinching the contacts If the main PBA switching IC on/off error has occurred, replace the main PBA.
	SR		The "E2" error occurs if the main relay connections are incorrect. Check the connections. If there is no error in the connections, replace the main PBA
	dS 22 (Before operation)		Check the door switch and latch alignment . Check the latch for damage Check the wiring harness to the latch. Check the door switch. Replace if faulty. Check the main PBA door sensing circuit. Replace if faulty. Finally verify the operation of the Main PCB
Door Error	dL 18 (During operation)		
	LO 2 (Unlock Fail)		
	FL 4		

Error Type	Error Mode		Details
	LED	LCD	
Heater Error	Hr 36 (Heater Relay)		This can be a short or a wire disconnected to the heater circuit. This can also be problem with the tub contacting the heater or if the water in the tub is frozen or there is no water. The error is triggered by temperatures above 145C. If the heater has no error, this occurs because of a PBA relay malfunction. Check the wiring harness to the heater. An Hr error occurs if the steam heater, is faulty, replace it.
	9E1		EMC Filter issue or a noise spike from an external device
Overflow error	OE E		Water is supplied continually because the water level detection does not work. - Verify the drain is working properly, the water level detection does not work and water is supplied continually. Verify the water valves shut off fully. Finally check the water level sensor.
Temperature Sensor Error	29 		The washing heater temperature sensor in the tub has an error. Check the connections for the washing heater temperature sensor connector.
Unbalance Error	dC 10		Check the type of laundry. Check whether it may cause an unbalanced situation.- Educate the consumer in this case, to press pause, reposition the load or remove a few items. Press start to continue and complete the wash cycle.
Silver Care Kit (Silver Care PCB) Failure.	7E		Check Silver Care PCB ,Main PCB & Wire-harness
Mems or Har-	8E		Check MEMS PCB ,Main PCB & Wire-harness
Foaming Detected	SUDS Sd		This occurs when too much foaming is detected. It is also displayed while foaming is removed. When the removal is finished, the normal cycle proceeds. (This is one of the normal operations. It is an error for preventing non-sensing faults.)

Check whether the washing machine is level to the floor with respect to the original position of the washing machine prior to service. Doing this now will reduce the need for a redo call and customer dissatisfaction.

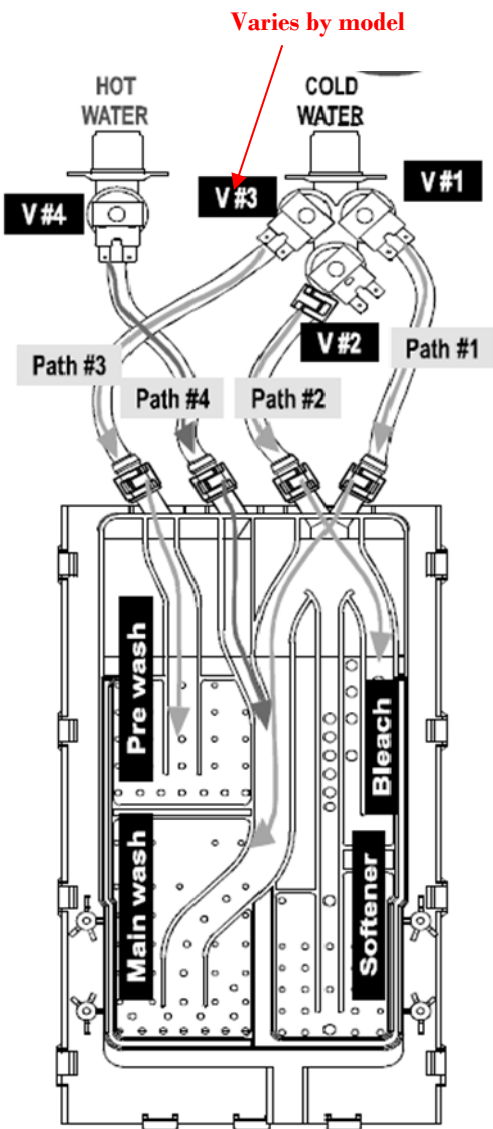
✓ Vibrations can shorten the lifetime of the product.

Foot Pad for Walking Washer, There is one in each package, so order 4

When installing a washer and dryer on the first, or second floor, do not exceed this leg adjustment height for stability.

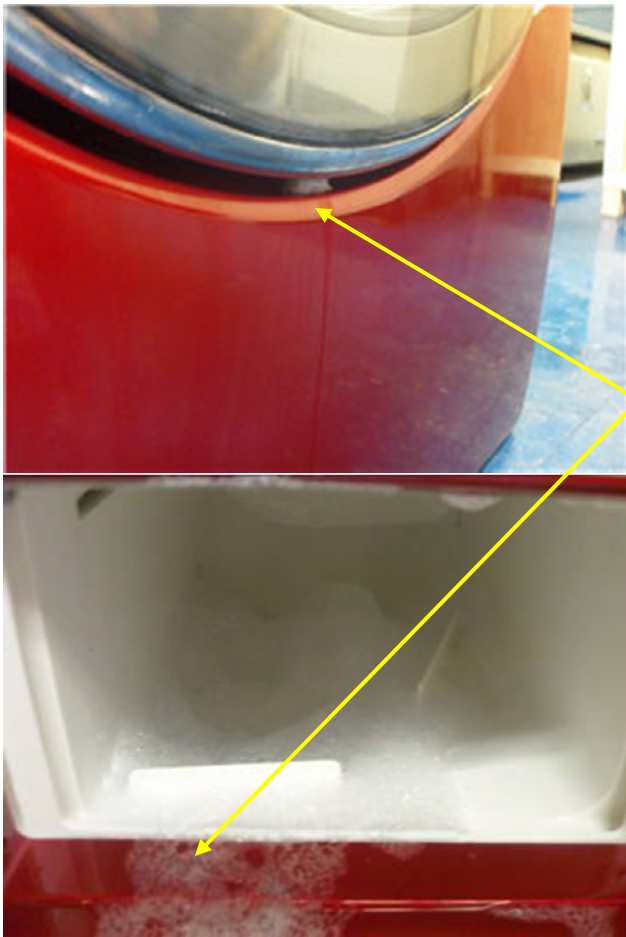


Water valve connections for the Detergent Drawer



Items Packed With Washer

- BOLT-SPANER (10-13mm Wrench) DC60-40146A
- ASSY HOSE WATER DC97-15691A
- ASSY HOSE WATER DC97-15692A
- MANUAL-BOOK DC68-02535A
- CAP-FIXER DC67-00307A
- HOSE-HANGER DC62-10278A



When using non-HE detergents, or using too much detergent for the water hardness and soil level of the clothing, over sudsing will occur. When this happens there will be leaks out of the detergent drawer and door. Please advise consumer of proper detergent usage.

It is normal for a small amount of water remaining in Detergent Drawer after it completes washing. Bleach is usually flushed out into the tub at the beginning of the washing. Also, its compartment is washed again during the following rinse cycle, removing any remnants.

Laundry Touch Up Paints



Location considerations

Do not install your washer in areas where water may freeze, since your washer will always maintain some water in its water valve, pump, and hose areas. This can cause damage the belts, the pump, hoses and other components.