



SERVICE TIP	
Product:	Four Door Flex Refrigerators with Family Hub Display
Date:	04/22/2016
Models:	RF22K9581SG/AA / RF22K9581SR/AA / RF28K9580SG/AA / RF28K9580SR/AA

Subject: This tip covers proper procedure for replacing a complete Family Hub Display Assembly; it is not intended as a diagnostic aid. Consult Fast Track or Service Manual for in-depth technical information.



Step 1: Turn off the Family Hub. The switch is under the cover at the top of the door.



Step 2: Remove the screw and cover at the top of the door.



Step 3: Using a long magnetic screwdriver, carefully remove two screws.



Step 4: Attach a suction cup to the display, close to the top.
Carefully pull on the suction cup while holding the bottom of the panel in place.
****Do not stretch the wiring too far, the harnesses could become damaged.**



Step 5: Disconnect all wiring harnesses from the display Main PBA. Remove the display assembly and set it down on a protected surface.



Step 6: Rest the new display on the bottom ledge of the door opening. Attach all wiring to the main board connectors and press the assembly into the door. Install the two screws.



Step 7: Replace the top cover and turn on the switch. Replace the switch cover and check operation of the Family Hub assembly.

