



Fast Track Troubleshooting


Publication # tsRS263BB Creation Date 11/02/2009

Models Covered:
 RS263BBBB/XAA
 RS263BBSH/XAA
 RS263BBWP/XAA
 RS265LBBP/XAA
 RS265LBWP/XAA
 SxS Refrigeration

IMPORTANT SAFETY NOTICE – “For Technicians Only” This service data sheet is intended for use by persons having electrical, electronic, and mechanical experience and knowledge at a level generally considered acceptable in the appliance repair trade. Any attempt to repair a major appliance may result in personal injury and property damage. The manufacturer or seller cannot be responsible, nor assume any liability for injury or damage of any kind arising from the use of this data sheet.


Self Diagnosis: Press both buttons (Power Freeze—Power Cool) *simultaneously* (No sound when both buttons are pressed at the same time) 'til the display quits blinking and beeps, 8-12 seconds, then release and read Fault Codes.

This will also cancel the Fault Mode created by self-diagnosis at power up.

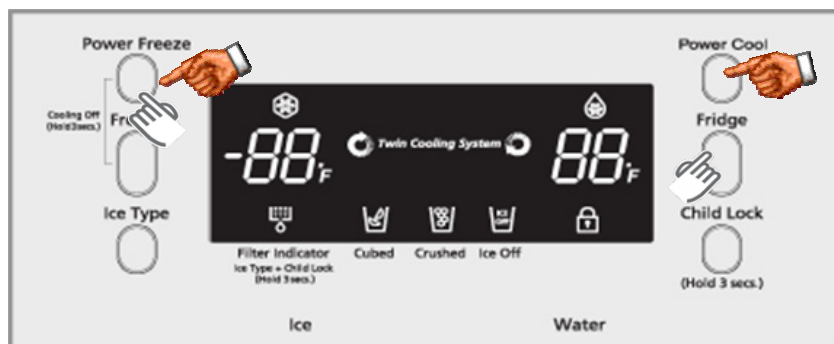

Forced Mode: Press both buttons (Power Freeze – Fridge) *simultaneously* (No sound when both buttons are pressed at the same time) 'til it beeps and goes blank, 8-12 seconds

Wait 5 seconds between button pushes

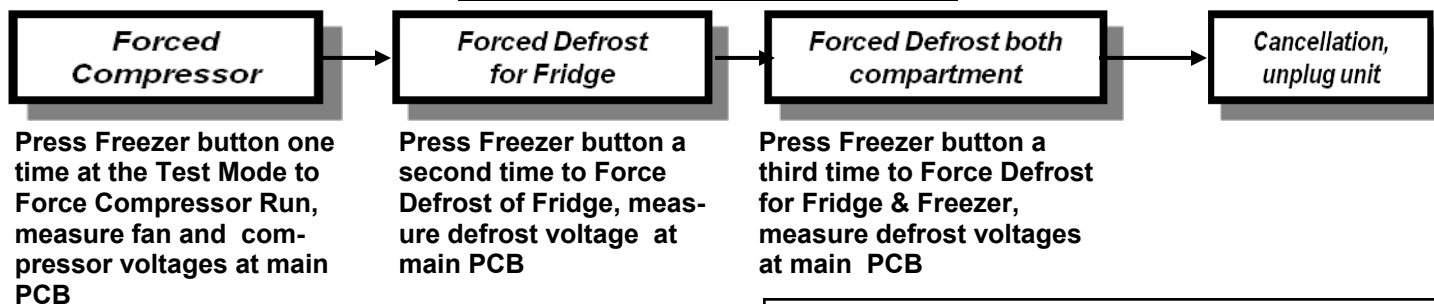


Sales Mode, No Compressor Operation
 Press Power Freeze & Freezer temp buttons simultaneously for 3 sec (you will hear a “Ding Dong”) to remove or put into Sales Mode. When in the Sales Mode the Display will show “OF” “OF”
 Removing power will not cancel this mode.

Component Value Chart

Component	Resistance	Wattage	Voltage
Freezer Defrost Heater	58Ω	215	120vac
Fridge Defrost Heater	103Ω	140	120vac
Freezer Drain Heater	320	45	120vac
Dispenser Heater	2880Ω	5	120vac
Water Tank Heater	3600Ω	4	120vac
Fill Tube Heater	2880Ω	5	120vac
Sensors	2.5kΩ-89kΩ	N/A	1~4.5vdc
Fans	N/A	N/A	7~12vdc

Sealed System

Refrigerant Charge
 R134a 7.76 oz.

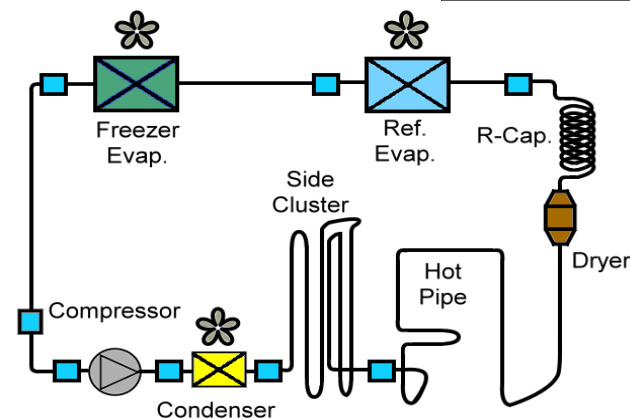

Compressor → Condenser → Side Cluster → Hot Pipe →
 Dryer → R Capillary → R Evaporator → F Evaporator →
 Suction Pipe → Compressor



FLEX TRAY Ice Makers

When the initial power is applied, the ice tray will stand by for 2 hours. After the 2-hour standby time, the Ice Maker Sensor will check the temperature, when it is lower than 1.5°F for more than 5 minutes, it will do a harvest, with or without ice in the tray, then fill with water. 58 minutes after water is supplied to the Ice Tray, the Ice Maker Sensor temperature will be checked. When the Ice Maker Sensor maintains lower than 1.5°F for 5 minutes, it completes the harvest (if the ice bin is not sensed as full).

Thermistor senses temperature to determine water fill on newer units

Filling the tray

After the water fill is completed, the ice maker sensor will evaluate the water volume one and a half minutes later. When it detects no or low water level, it will add more water. First supply time will be 1.5 sec, next one will be 1 sec and the last will be 2 sec.

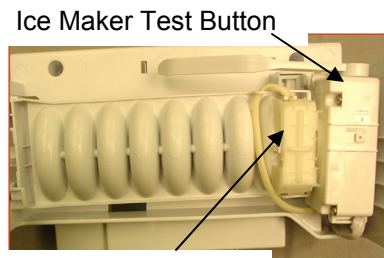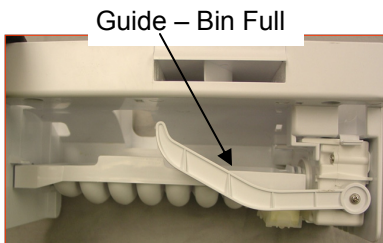

Ice Maker Thermistor

Shattered Ice – Flex Tray

When all ice shatters, it's because of a bad tray or ice cube temp that is too cold (lower than -5 degrees). In some areas, there are water issues that can also cause shattered cubes. The temp in the freezer should not have any effect on this issue, as long as it's below 1.5 degrees F, as a properly installed sensor will not read the freezer temp, only the water/ice temp.

Check the Ice tray for defects in the plastic. Ice that is too cold will shatter during harvest. This can be from the (1) sensor not reading the correct temp (2) or the sensor not mounted correctly (3). By programming the icemaker offset value to a lower number (4), the board not understanding the reading. To check the sensor, you must check the tray temp (not air temp) and compare it to the sensor reading. The sensor should read 3.7 volts at the main board connector when the cube temperature is 1 degree. After the fill, the sensor will read water temp 1.5 to 2.2 volts. To clear offsets, put unit into Diagnostics mode.

Please note, some shattering is normal for a flex tray icemaker.

FREEZER TEMPERATURE CONTROL BY THE ICE MAKER

Interior Temperature of the freezer will be set to -14 degrees Fahrenheit until the ice bucket is full. When the ice bucket is full, the freezer will maintain original set temperature. Also, whenever the ice is used, the freezer will again set to -14 degrees Fahrenheit. Selecting "Ice Off" will allow the freezer to be controlled by the set temperature. If water is not hooked up, the freezer will always be at -14 unless "Ice Off" is selected.

DEFROST

This model series uses a Defrost Heater in the Fridge and the Freezer compartment that is part of the Evaporator Coil.

NOTE: Evaporator Covers May Break If Removed While Frozen To Coil. They must be replaced if there is any damage, as this will cause "ice" to form at top or bottom of the evaporator coil or in the drains.

Temperature/Resistance/Voltage Chart for Samsung Refrigerators Sensors

Temp.	(Ω)	Volts	Temp.	(Ω)	Volts	Temp.	(Ω)	Volts	Temp.	(Ω)	Volts
-29.2°F	64227	4.326	1.4°F	28021	3.685	32.0°F	13290	2.853	62.6°F	6771	2.019
-27.4°F	61012	4.296	3.2°F	26760	3.64	33.8°F	12749	2.802	64.4°F	6521	1.974
-25.6°F	57977	4.264	5.0°F	25562	3.594	35.6 °F	12233	2.751	66.2°F	6281	1.929
-23.8°F	55112	4.232	6.8°F	24425	3.548	37.4 °F	11741	2.7	68.0°F	6052	1.885
-22.0°F	52406	4.199	8.6°F	23345	3.501	39.2 °F	11271	2.649	69.8°F	5832	1.842
-20.2°F	49848	4.165	10.4°F	22320	3.453	41.0°F	10823	2.599	71.6°F	5621	1.799
-18.4°F	47431	4.129	12.2°F	21345	3.405	42.8°F	10395	2.548	75.2°F	5225	1.716
-16.6°F	45146	4.093	14.0°F	20418	3.356	44.6°F	9986	2.498	77.0°F	5000	1.675
-14.8°F	42984	4.056	15.8°F	19537	3.307	46.4°F	9596	2.449	78.8°F	4861	1.636
-13.0°F	40938	4.018	17.6°F	18698	3.258	48.2°F	9223	2.399	80.6°F	4690	1.596
-11.2°F	39002	3.98	19.4°F	17901	3.208	50.0°F	8867	2.35	86.0°F	4218	1.483
-9.4°F	37169	3.94	21.2°F	17142	3.158	51.8°F	8526	2.301	87.8°F	4072	1.447
-7.6°F	35433	3.899	23.0°F	16419	3.107	53.6°F	8200	2.253	89.6°F	3933	1.412
-5.8°F	33788	3.858	24.8°F	15731	3.057	55.4°F	7888	2.205	91.4°F	3799	1.377
-4.0°F	32230	3.816	26.6°F	15076	3.006	57.2°F	7590	2.158	95.0°F	3547	1.309
-2.2°F	30752	3.773	28.4°F	14452	2.955	59.0°F	7305	2.111	96.8°F	3428	1.277
-0.4°F	29350	3.729	30.2°F	13857	2.904	60.8°F	7032	2.064	100.4°F	3204	1.213

DC FAN MOTORS

Brushless DC Fan motors are used to save energy. The fans operate at two speeds. Fan speed information is read by the Main PCB. If the fan speed exceeds 600 RPM or the speed is too slow, or stopped the fan drive circuit is disabled, After 10 seconds the circuit tries again with 3 seconds of DC voltage. If the fan continues this activity for 5 cycles, 10 seconds off 3 seconds on, the fan drive circuit is disabled for 10 minutes.

TO TEST THE FAN CIRCUIT VOLTAGE.

Power off and back on to check the DC voltage to the motor, wait from 10 to 60 seconds for the fan voltage to kick in, and then check fan voltage, the average reading is 9 VDC. If you get 3 seconds of voltage every 10 seconds for the 5 fan power up cycles, then the Main PCB is good.

NOTE: You may need to put unit in FORCED FREEZE mode to activate the fans/compressor.

If the fan blade is blocked by ice, then defrost and check the motor again, after removing power from the unit.

If the evaporator is ice blocked and thus blocking the air flow, the fan will over RPM and will be stopped. Remove ice and check the motor again. If everything is clear around the fan blade then the motor would be at fault. Continuous fan errors will be displayed on the front panel display. **PLEASE NOTE:** The door switches control the evaporator fan motors. Have them closed to test the motors. Delay time 10 – 60 seconds.

Samsung 'Refrigerator' Diagnostic Code Quick Guide

Error Items	LED	TROUBLE	TESTING
I/M-SENSOR		Ice Maker Sensor Error- open or short-circuit, connector failure. Cause is also a temperature reading > 122° or < -58 ° F	The voltage at MAIN PCB Sensor between 4.5V~1.0V
R-SENSOR		Refrigerator Room Sensor Error- open or short-circuit, connector failure. Cause is also a temperature reading > 122° or < -58 ° F.	The voltage at MAIN PCB Sensor between 4.5V~1.0V
DEFROST SENSOR OF ROOM		Ref. Defrost Sensor Error- open or short-circuit, connector failure. Cause is also a temperature reading > 122° or < -58 ° F	The voltage at MAIN PCB Sensor between 4.5V~1.0V
R-FAN ERROR		This error indicates the Refrigerator Evap Fan is not spinning at the correct RPM or the fan feedback line is open.	Fan voltage at MAIN PCB shall be between 7V~12V
I/M FUNCTION ERROR		This error indicates the Ice tray has not returned to level after an ice harvest. The error is displayed after three failed attempts.	Replace I/M
COOL SELECT ZONE SENSOR		Cool Select Zone Sensor Error- open or short-circuit, connector failure. Cause is also a temperature reading > 122° or < -58 ° F	The voltage at MAIN PCB Sensor between 4.5V~1.0V
R-DEFROSTING ERROR		Refrigerator Room defrost heater- open or short-circuit, connector failure, or defective temperature fuse/bi-metal. Defrost on over 80 minutes	Disconnect defrost connector from PCB, check resistance
EXT-SENSOR		Ambient Temp. Sensor Error- open or short-circuit, connector failure. Cause is also a temperature reading > 122° or < -58 ° F	The voltage at MAIN PCB Sensor between 4.5V~1.0V
F-SENSOR		Freezer Compartment Sensor Error- open or short-circuit, connector failure. Cause is also a temperature reading > 122° or < -58 ° F	The voltage at MAIN PCB Sensor between 4.5V~1.0V
F-DEF-SENSOR		Freezer Room Defrost Sensor Error- open or short-circuit, connector failure. Cause is also a temperature reading > 122° or < -58 ° F	The voltage at MAIN PCB Sensor between 4.5V~1.0V
F-FAN ERROR		This error indicates the Freezer Evap. Fan is not spinning at the correct RPM or the fan feedback line is open.	Fan voltage at MAIN PCB shall be between 7V~12V
C-FAN ERROR		This error indicates the Condenser Fan is not spinning at the correct RPM or the fan feedback line is open.	Fan voltage at MAIN PCB shall be between 7V~12V
F-DEFROSTING ERROR		Freezer defrosting heater- open or short-circuit, connector failure, or defective temperature fuse/bi-metal. Defrost on for over 80 minutes	Disconnect defrost connector from PCB, check resistance
Uart ERROR COMMUNICATION		This error is not applicable, if the error is detected during diagnostic testing please ignore it.	No Repair Necessary
L-M ERROR COMMUNICATION		Communication error within the Main PCB	Replace main PCB
P-M ERROR COMMUNICATION		Communication between the Main PCB and Keypad	Check wiring in door & cabinet, Panel PCB, Main PCB


RS263BB, RS265LB

- CN72**
 6-7 F-Fan (Yel-Gry) **10-11.1vdc**
 5-7 R-Fan (Org-Gry) **10vdc**
 4-7 C-Fan (S/Blu-Gry) **8.3-10vdc**
 3 F-Fan control (Blk)
 2 R-Fan Control (Brn)
 1 C-Fan Control (Red)

- CN31**
 1-4 Ambient Sensor (Wht-Wht) **1.2-2vdc**
 2-3 Ice SW (**Org-Org**)

- CN10 120VAC**
 1-3 A/C Line (Blk-Red)

- CN30**
 1-2 F Door SW (W/Red-Brn)
 5-6 R Door SW (W/Blu-Brn)
 3-2 F Sensor (Yel-Brn) **3.5-4.2vdc**
 4-2 F-Def Sensor (Blu-Brn) **2.3-4.2vdc**
 7-6 R Sensor (Gry-Brn) **2.4-2.8vdc**
 8-6 R-Def Sensor (Prp-Brn) **2-4.2vdc**
 9 Flow Sensor out (Wht)
 10 Flo Sensor GND (Blk)
 11 Flow Sensor Vcc (Red)

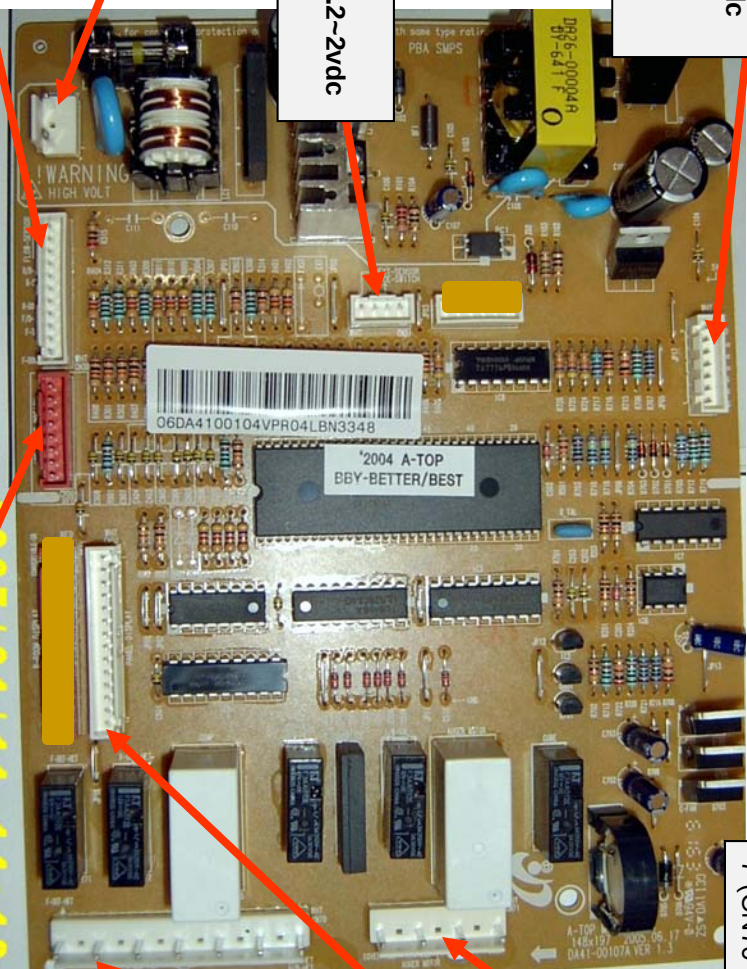

- CN71 120VAC**
 1-(CN70-11) Cube Solenoid (Yel-Red)
 3-(CN70-11) Auger Mtr (Pnk-Red)
 5-(CN70-11) Ice-Motor Solenoid (Prp-Red)
 7-(CN70-11) Cover Ice Solenoid (W/Blk-Red)


CN50 Panel PCB

- BLU-BLUE
 BRN-BROWN
 RED-RED
 GRAY-GRAY
 ORG-ORANGE
 PNK-PINK
 E-EARTH
 PRP-PURPLE
 S/BLUE-SKY BLUE
 WHT-WHITE
 YEL-YELLOW
 BLK-BLACK
 W/BLK-WHITE/BLACK
 W/RED-WHITE/RED
 W/BLU-WHITE/BLUE
 W/YEL-WHITE/YELLOW

- CN90**
 1-2 I/M Motor (Red-Blk) **12vdc**
 3-4 I/M Sensor (Wht-Wht) **2.3-3.3vdc**
 5-8 Test SW (Gry-S/Blu)
 6-8 Horiz check SW (Blu-S/Blu)
 7-8 Ice Check SW (Prp-S/Blu)

- CN70 120VAC**
 1-11 Dispenser / Water Tank / R Home Bar HTRs (Blu-Red)
 5-11 Compressor (S/Blu-Red)
 9-7 R-Def/Ice Pipe HTR (Wht-Org)
 13-7 F-Def HTR (Brn-Org)

PBA PANEL



14-PIN

PBA MAIN



CN10(WHT)

DEFROST HEATER, F

F-DRAIN HEATER

DEFROST HEATER, R

ICE MAKER PIPE HEATER

PTC RELAY

RUNNING CAPACITOR

WATER TANK HEATER

DISPENSER HEATER

W/BLK

PRP

PNK

YEL

CN70(WHT)

W/BLK

PRP

PNK

YEL

CN71(WHT)

CN72(WHT)

GRY

YEL

Vcc

Vcc

Vcc

S/BLU

BLK

BRN

RED

+12V

GND

BLK

BLK

WHT

GRY

BLU

PRP

S/BLU

CN90(RED)

W/RED

BRN

YEL

BLU

W/BLU

BRN

GRY

PRP

CN30(WHT)

W/RED

BRN

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP

GRY

YEL

BLU

PRP